




Video Guide

Components

Dial Cap x2
Dial Base x2
Lace (Wire) x2
Needle
Clip

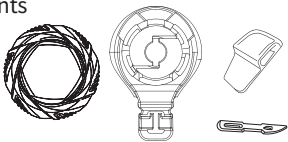

* Please read the instructions carefully before assembly.
* Important parts are highlighted in red.

1 (From the LEFT side)

Attach the Dial Base to the upper part of the shoe.
*For left shoes, install on the left side
For right shoes, install on the right side.

2 Two Holes One Hole

Eyelet configurations vary by shoe. Please assemble according to the method that fits your specific shoe.

3

Hook the lace so it does not slip out.
←Clip

Use the clip to rotate the internal part in the direction of the arrow to tighten the lace.

4 **TIP!** Using the needle tool makes it easier to thread the wire through the eyelets.

check!

(From the LEFT side)

Thread the included lace starting from the bottom eyelets just like regular shoelaces.
*Align the lace direction: Leftward for left shoes, Rightward for right shoes.

5

Turn the dial to align it as shown in the picture.
*The inner holes must align for the lace to enter.

5-1

Upper lace into the top hole,
Lower lace into the bottom hole.

6 **TIP!** You can use scissors to trim the ends neatly.

Tie a double knot at the very end of each lace.

6-1

Pull the laces in the direction of the arrows so the knots sit securely inside the dial.

7 Attach the Dial Cap to the Dial Base installed on the other side.
*Make sure to insert the front part first.

1

2 *Push until you hear a "click" sound.

3

8

Turn the dial to tighten the laces, and you are done.
Repeat the same process for the other shoe.